


## **ACCU-GAGE TIRE GAUGE INSTRUCTIONS**

REMOVE TIRE VALVE CAP & PRESS TIRE GAUGE STEM FIRMLY AGAINST TIRE VALVE.

READ TIRE PRESSURE (THERE SHOULD BE NO AIR LEAKAGE WHILE READING IS TAKEN).

ADJUST PRESSURE, IF NECESSARY, IN ACCORDANCE WITH YOUR VEHICLE OWNER'S MANUAL RECOMMENDATIONS.

PUSH BUTTON VALVE BLEEDS AIR TO DESIRED PRESSURE. NEEDLE HOLDS READING UNTIL RELEASED.

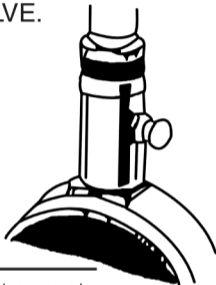

This gauge has a lifetime warrantee.

For warranty repairs, send gauge along with \$3 for return shipping to:

G. H. Meiser & Co.  
Repairs  
2407 W. 140th Place  
Posen, Illinois 60469 USA